



830493 [Draft Load Sensing Splitter Kit]

Instruction Guide

Installation of the Draft Load Sensing Signal Splitter Kit requires 1 functioning sensor pin.

Installation:

1. Connect the splitter end of the cable (in line) with the good pin
2. Run the other end of the harness across the tractor, underneath the cab, to the other side of the tractor
3. Disconnect the bad pin lead from the wiring harness and tie back the lead using the nylon tie supplied
4. Connect splitter end to tractor wiring harness

The draft load sensing will be back to functioning in the electronic mode

