

HA62051 [Hydraulic Gear Pump]

Instruction Guide

1. Install O-ring, then grease suction tube and place it on pump
2. Install pump drive coupler on pump shaft



1. Insert two 3/8" (dowel) bolts into housing for installation
2. Place O-ring in housing and grease
3. Be sure that Fuel shutoff valve is in the OFF position
4. Slide the pump onto the dowels
5. Gently bump the key switch to align the spline into the drive coupler
6. Gently wiggle the pump into place with a slight inward pressure
7. It is strongly recommended that hydraulic oil and filter also be changed

