



HR173604 [Epistar LED Flood Beam Light, 1400 Lumens]

Instruction Guide

1. Remove original light from machine leaving mounting bracket in place
2. While holding the light in place, install by attaching links to OE bracket using 2 short bolts, proper spacers, and nuts. Spacer size is determined by OE bracket width, which varies by application. Discard remaining spacers
3. Install proper electrical connector
4. Adjust light beam to desired direction and secure hardware

