



S8302297 [Grammer Mid-Back Seat, Black Vinyl]

Instruction Guide

Tip the seat forward (unplug quick connect on machines equipped w/operator presence switch). To remove the seat from the tractor, remove the (2) hinge bolts from the seat and mounting plate. Remove plastic cover from the bottom of seat and unplug wire harness from operating presence switch to be used on the new seat

1. Remove the lower seat cushion by removing (2) T25 Torx screws. Lift the seat cushion and slide it forward to remove
2. Place seat onto plate with the tabs down and to the front of seat. Start the front (2) 5/16" x 18" bolts and nuts, finger tighten. Place rubber stopper on the other 2 bolts. Attach rear bolts and nuts into seat. Tighten all bolts
3. Install operator presence switch onto seat bottom
4. Using wire harness removed from the original seat, attach the ends using butt connector to operate presence switch wire
5. Attach the hinge plate to the tractor using (2) shoulder bolts and nuts (supplied). Connect the wiring quick coupler, secure wire making sure it does not get caught or pinched when the seat is moved forward and back

OPS Switch Instruction Video: <https://www.youtube.com/watch?v=-fsOv0CU81E>

