



HA87661289 [Draft Load Sensing Pin Elimination Kit]

Instruction Guide

1. Unplug both sensor pins from the wiring harness of tractor. Connectors are located under the rear of the cab, directly in front of the three-point rock shaft, on each side
2. Secure sensor pin harness to the harness tube with supplied plastic tie wraps
3. Plug in the electronic load sensing elimination modules in place of the sensor pin electrical connectors
4. Secure the electronic load sending elimination modules to the tractor wiring harness with supplied plastic tie wraps to prevent damage caused by movement

Hitch control functions will work in manual mode only, without draft control

