



## HF84367883 KIT [Hy-Cap LED Hi-Lo Beam Lamps]

### Instruction Guide

1. Apply penetrating fluid to nuts. Allow it to soak before removing the nuts.
2. Disconnect electrical connections.
3. Carefully remove nuts or hardware holding the lights in place.  
**These nuts may be difficult to remove due to rust. Do not twist mounting bolts.**
4. Remove the light housing from hood.

**Machines with HID MIDDLE LIGHT: The middle light may need a wiring modification. If your OE light contains an HID, disconnect the HID light and ballast, and remove the ballast from the machine. The wire going into the ballast will need to have a new connector installed to match the connector on the new middle light. We have included connectors for you to install if needed. Also included are (4) butt-connectors to use if you wish to eliminate the connector.**

5. Place the new light into the hood.
6. Secure the new light with the hardware provided.
7. Attach all other electrical connections as needed.

