




888301026 [Compressor Conversion Kit, Delco R4 to Sanden Style]

Instruction Guide

1. Remove old compressor and all mounting brackets
2. Install the new compressor mounting bracket and tighten the bolts
3. Bolt the new compressor to the mounting bracket using the supplied hardware. Install the compressor with the drain plug on top, your suction and discharge port will be the same as the old compressor
4. Install the belt provided in this kit

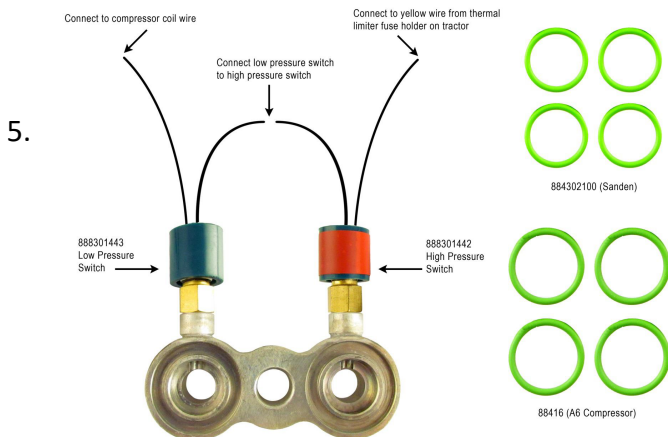

6. Replace the original low-pressure switch in the receiver drier with the new (high/low) switch provided in the kit and install wiring. Find your hot wire and connect it to the compressor clutch. The remaining wires are not needed
7. The heavy-duty Sanden Style Compressors used in the compressor conversion kit is preloaded with 134A PAG oil that meets the requirement of the compressor. An additional 2 or 3 ounces is usually needed on tractor/combine size equipment

