


88 Series Auxiliary Condenser Kit

Kit will decrease high side pressures by 50 to 100 PSI

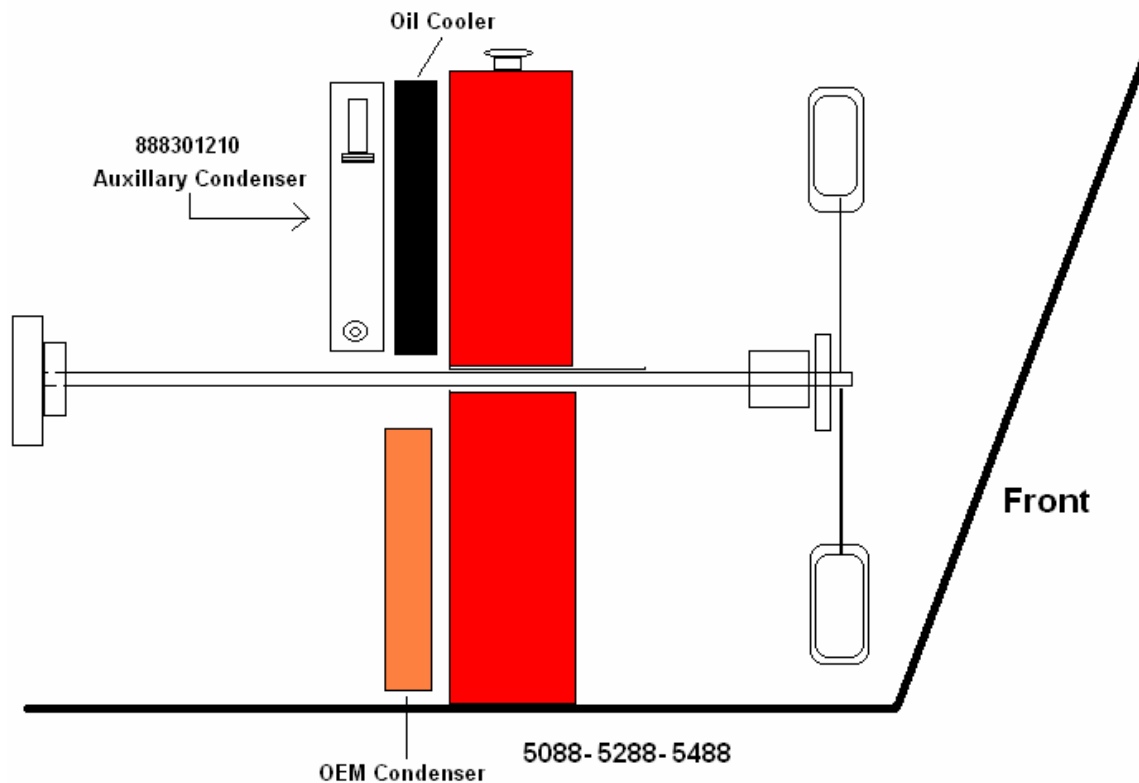

1. Evacuate Freon from system and remove condenser discharge hose from OEM condenser
2. Mount auxiliary condenser to the back side, or cab side of the oil cooler using provided mounting kit
3. Use the hose included in kit to connect the original condenser discharge to the new auxiliary condenser inlet
4. Attach the original condenser discharge hose to the new condenser outlet fitting
5. Evacuate system, and service system as normal